




INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
INSTRUCTIONS FOR ASSEMBLY
INSTRUCCIONES DE MONTAJE




66RDM
SAF® & MA®


a

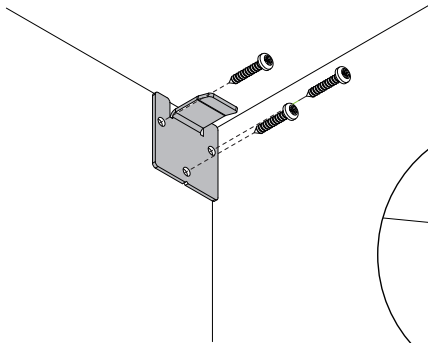




b

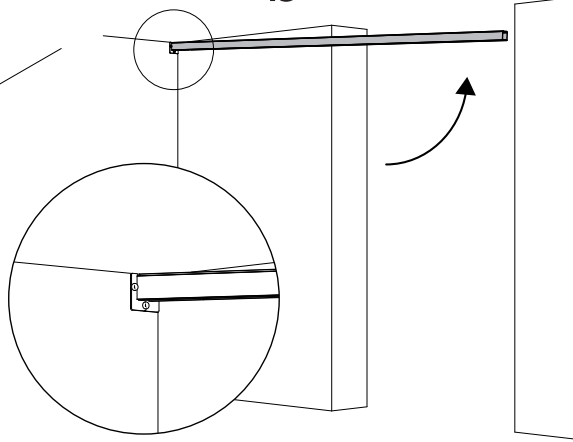

c

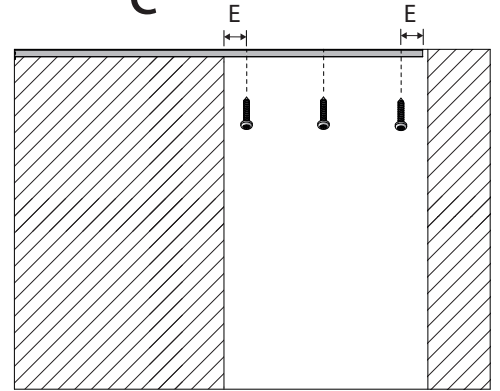

$E = 50 \text{ mm} - 2 \frac{1}{8}''$

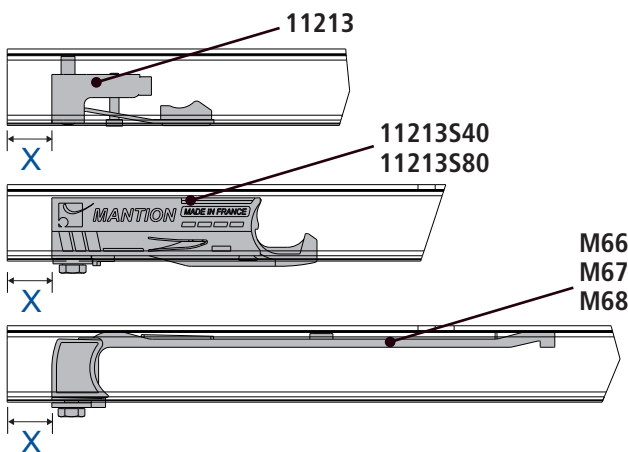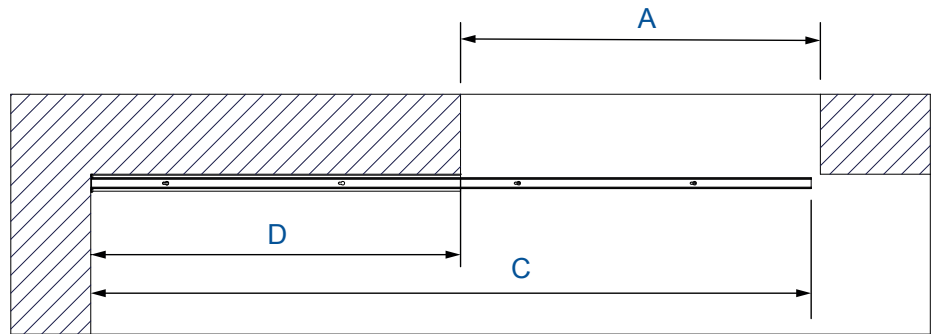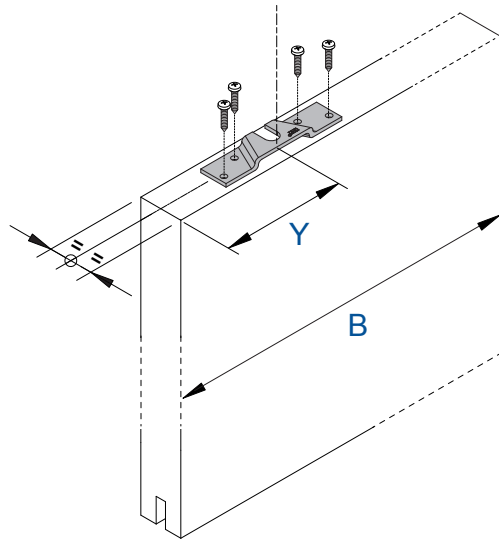

	X	Y
11213	28 mm - 1 1/8"	107 mm - 4 3/16"
11213S40 11213S80	28 mm - 1 1/8"	150 mm - 5 15/16"
M66 & M67 M68	28 mm - 1 1/8"	82 mm - 3 1/4"

A	B*	C	D
1000 mm	1020 mm	2000 mm	1150 mm
900 mm	920 mm	1800 mm	950 mm
800 mm	820 mm	1600 mm	750 mm
700 mm	720 mm	1400 mm	550 mm
1010 mm	1030 mm	2020 mm	1170 mm
910 mm	930 mm	1820 mm	970 mm
810 mm	830 mm	1620 mm	770 mm
710 mm	730 mm	1420 mm	570 mm
39 3/16"	40"	78 7/16"	40 3/16"
37 3/16"	38"	74 7/16"	38 3/16"
35 3/16"	36"	70 7/16"	36 3/16"
33 3/16"	34"	66 7/16"	34 3/16"
31 3/16"	32"	62 7/16"	32 3/16"
29 3/16"	30"	58 7/16"	30 3/16"

*2 x M66 (M67) --> B min = 880 mm

--> B min = 34 7/8"


*2 x M68 --> B min = 920 mm

--> B min = 36 3/8"






INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
INSTRUCTIONS FOR ASSEMBLY
INSTRUCCIONES DE MONTAJE

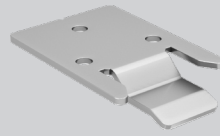


66RDP
SAF® & MA®


a

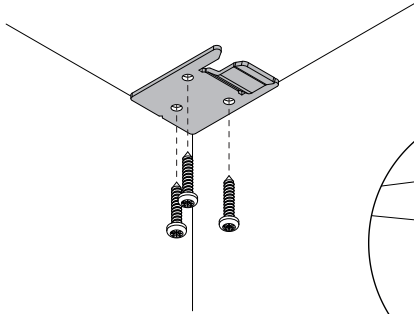




b

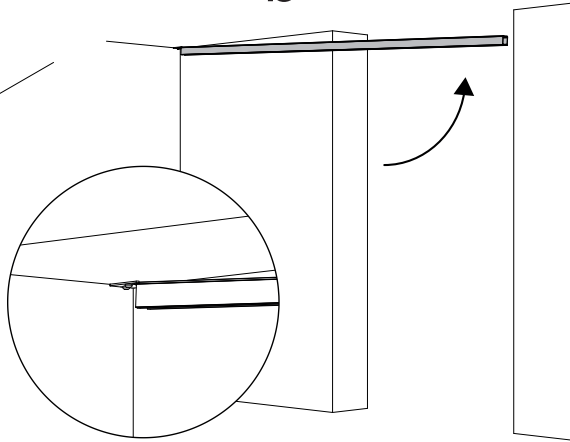

c

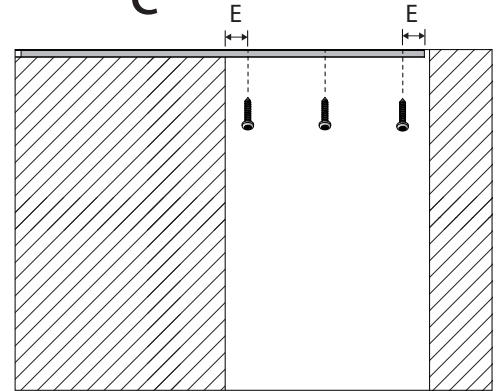

E = 50 mm - 2 1/8"

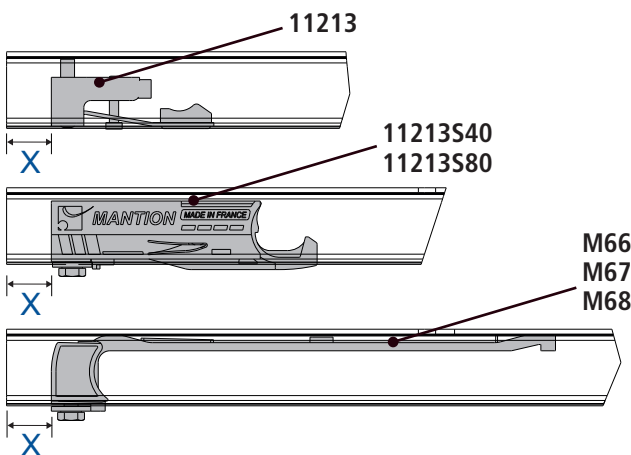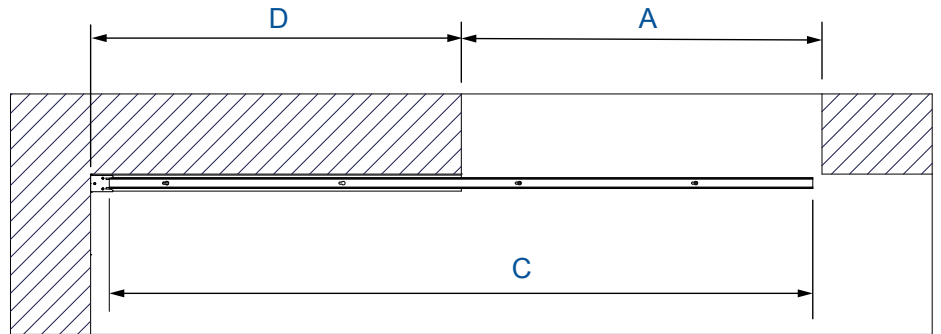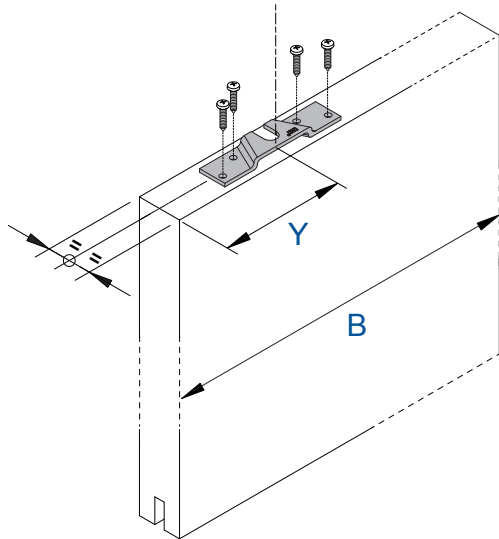

A	B*	C	D
1000 mm	1020 mm	1960 mm	1025 mm
900 mm	920 mm	1760 mm	925 mm
800 mm	820 mm	1560 mm	825 mm
700 mm	720 mm	1360 mm	725 mm
1010 mm	1030 mm	1980 mm	1035 mm
910 mm	930 mm	1780 mm	935 mm
810 mm	830 mm	1580 mm	835 mm
710 mm	730 mm	1380 mm	735 mm
39 3/16"	40"	76 14/16"	40 3/16"
37 3/16"	38"	72 14/16"	38 3/16"
35 3/16"	36"	68 14/16"	36 3/16"
33 3/16"	34"	64 14/16"	34 3/16"
31 3/16"	32"	60 14/16"	32 3/16"
29 3/16"	30"	56 14/16"	30 3/16"

	X	Y
11213	20 mm - 1 13/16"	140 mm - 5 1/2"
11213S40 11213S80	20 mm - 1 13/16"	184 mm - 7 1/4"
M66 & M67 M68	20 mm - 1 13/16"	117 mm - 4 5/8"

*2 x M66 (M67) --> B min = 950 mm
--> B min = 37 7/16"
*2 x M68 --> B min = 980 mm
--> B min = 36 3/8"

